

CE certified low-resistance measurement compliant with major safety standards

Protective ground tester indispensable for standard certification

The 3157-01 AC GROUNDING HiTESTER is designed to measure whether the metal enclosure of an electrical equipment is connected to the ground terminal at sufficiently low resistance levels. It also can be used to evaluate the grounding conditions of large-scale electrical installations. Measurement is carried out by using a high current according to the specifications of the measurement object, and determining the voltage drop at the measurement point. Reference values are as set out in the various safety standards. The 3157-01 can carry out measurements in accordance with the stipulations of multiple standards.

Low-resistance measurements in accordance with all major safety standards



Main applications

The 3157-01 passes a large AC current through the measurement object and measures the voltage drop according to the AC 4-terminal method, making it possible to measure very low resistance values.

- Protective grounding checks of medical and general electrical equipment
- Ground connection tracing of machine tools and wiring panels
- Safeguard and equal-potential connection checks of medical installations
- High-current behavior evaluation of connections

Major features

■ Compliant with a multitude of standards

The 3157-01 allows measurement as prescribed by most major safety standards. Using the 4-terminal method to measure the voltage drop for a high current, the unit offers evaluation features and a timer function to allow efficient standard compliance testing.

■ Constant-current testing (max. 31.0 A) with feedback control

The output current is controlled by a feedback loop to achieve stability, regardless of fluctuations in the load impedance.

■ Test data count function

For installations with many test points, the unit can automatically count the number of tests, to ensure that no points are missed.

■ Setting value store function

Up to 20 settings can be stored, allowing quick switching between the various setups for different standards and legal requirements.

■ [SOFT START] function

The unit checks whether the probe is connected to the measurement object, and raises the output current to the preset value when a connection is detected. This serves to prevent sparks caused by connecting a live probe to a measurement object, thereby guarding against equipment damage and ensuring operator safety.

■ Fluorescent tube display (VFD)

The display uses an easy to read fluorescent tube. Compared to conventional meters, the digital indication allows effortless reading of the data.

■ Light weight and compact dimensions

Whereas conventional testing equipment required a trolley for transport, the 3157-01 can be easily carried with one hand. Its small dimensions, light weight, and ease of maintenance make it ideal for use in the field.


[320 (W) × 90 (H) × 263 (D) mm
12.6" (W) × 3.56" (H) × 10.40" (D)
7 kg(247.2 oz)]

Standards supported by the 3157-01

- IEC60065
Safety requirements for mains operated electronic and related apparatus for household and similar general use
- IEC60204-1
Electrical equipment of industrial machines -Part1,General requirements
- IEC60335-1
Safety of household and similar electrical appliances - Part 1, General requirements
- IEC60601-1
Medical electrical equipment -Part 1, General requirements for safety
- IEC60950
Safety of data processing equipment, including office equipment
- IEC61010-1
Safety requirements for measurement, control, and laboratory electrical equipment
- UL standard
Relevant standards
(UL 1012, UL 1270, UL 1409, UL 1419, UL 1437, UL 2601, etc.)


A multitude of functions in a compact body

Easy standard testing

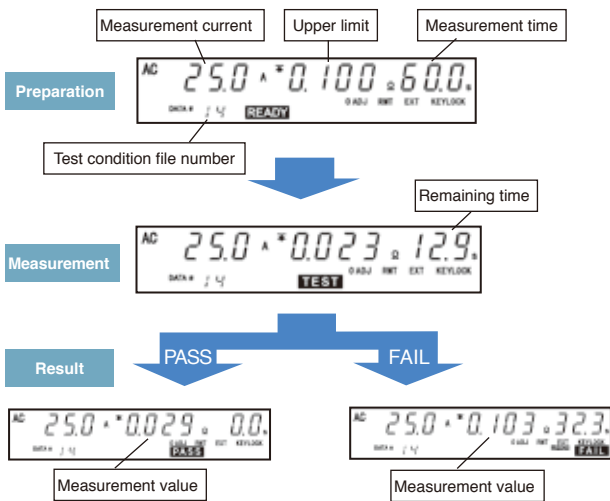

* If hold is not enabled, unit reverts to READY condition after 1 second.


Versatile functions

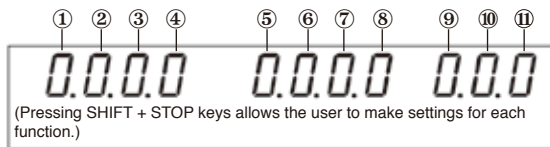

- ① Output current frequency switching (0: 50 Hz / 1: 60 Hz)
- ② PASS/FAIL hold function setting
 Determines whether the condition is held after detecting PASS or FAIL.

| | | | | |
|------|-----|-----|----|-----|
| | 0 | 1 | 2 | 3 |
| PASS | NO | YES | NO | YES |
| FAIL | YES | YES | NO | NO |
- ③ Hold function setting (0: Hold disabled / 1: Hold enabled)
 Holds the condition of the unit after the preset test time has elapsed or after the STOP key is pressed.
- ④ Use test lower limit setting (0: No / 1: Yes)
 Disabling the setting allows only the upper limit to be set. Enabling the setting allows also the lower limit to be set.
- ⑤ Timer override (0: No / 1: Yes)
 Determines whether a test time can be set. If test time is not set, the test ends only when the STOP key is pressed or the result is FAIL.

Measurement range

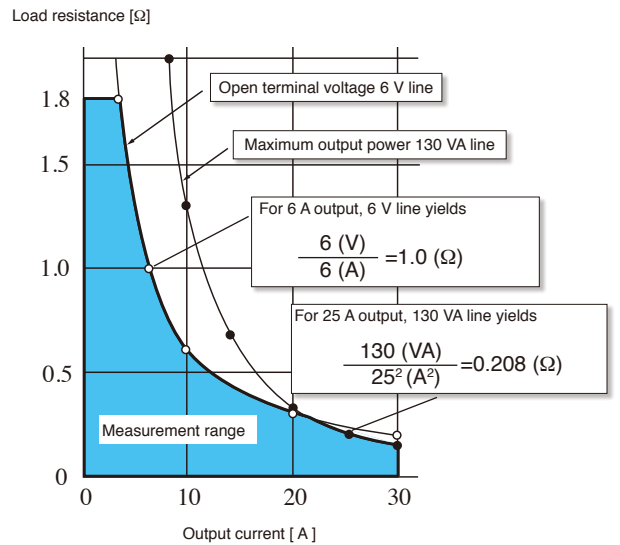

- ⑥ Test data count function (0: Disable/1: Enable)
 Allows counting of test points for equipment with many test points.
- ⑦ Buzzer setting

| | | | | |
|------------|----|-----|-----|-----|
| | 0 | 1 | 2 | 3 |
| Evaluation | ON | OFF | OFF | ON |
| Error | ON | OFF | ON | OFF |
- ⑧ Enable current control in test condition (0: No/1: Yes)
 Allows changing of the output current value while a test is in progress.
- ⑨ Momentary out
 Enabling this function allows the current to be output only when the START key is pressed.
 0: Disabled (trigger operation)
 1: Enabled (momentary out operation)
- ⑩ Test mode
 0: Soft start mode
 1: Normal mode
 2: Continuous test mode
- ⑪ Print function
 0: Not used
 1: Automatically print PASS/FAIL result
 2: Optionally print in PASS/FAIL hold condition

External I/O

The unit comes with I/O connectors as standard equipment. The connectors allow external START/STOP control, READY/TEST status checking, and PASS/FAIL result reading. Photocouplers are used to isolate the I/O signals from the internal circuitry.

External interface (option)

The 9518-02 GP-IB interface or 9593-02 RS-232C interface can be installed in the unit. This allows remote control from a computer as well as export of measurement data. The 9593-02 RS-232C interface also allows connection of the 9442 printer for producing a hard copy of measurement data.



- Printing method : Thermal serial dot printer
- Paper width : 112 mm
- Printing speed : 52.5 cps
- Power source : 9443 AC adapter, or supplied nickel-hydrate battery (Charged through 9443; printing capability approx. 3000 lines with full charge)

* To use the 9442 printer, an optional 9593-02 RS-232C interface, 9446 connection cable, and AC adapter are required.

3157-01 Specifications

Basic specifications

(Accuracy guaranteed for 1 year, Post-adjustment accuracy guaranteed for 1 year)

Basic functions : AC 4-terminal method resistance measurement

[Generator section]

Current generator principle : PWM constant current control
 Current setting range : 3.0 A - 31.0 A AC (0.1 A resolution), into 0.1 Ω load
 Accuracy : ± (1% of setting + 0.2 A) within maximum output power range
 Maximum output power : 130 VA (at output terminals) *
 * Subject to derating according to ambient temperature [80% at 40°C (104°F)]
 Open-terminal voltage : Max. 6 V AC
 Generator frequency : 50 Hz or 60 Hz sine wave (selectable)
 SOFT START function : Apply current only after checking load connection

[Monitor section]

Resistance measurement range : 0 - 1.800Ω (0.001Ω resolution)
 Accuracy : ± (2% rdg. + 4 dgt.) after zero-adjust
 Current monitoring range : 0 - 35.0 A AC (0.1 A resolution)
 Accuracy : ± (1% rdg. + 5 dgt.) (at 3 A or more)
 Voltage monitor range : 0 - 6.00 V AC (single range 0.01 V resolution)
 Accuracy : ± (1% rdg. + 5 dgt.)
 Monitoring cycle : 0.5 s

[Timer section]

Setting ON : Counts down time after start until preset time
 Setting OFF : Shows elapsed time after start
 Setting range : 0.5 - 999 s
 Setting resolution : 0.1 s (0.5 - 99.9 s) / 1 s (100 - 999 s)
 Accuracy : ±50 ms (0.5 - 99.9 s) / ±0.5 s (100 - 999 s)

[Other functions]

Comparator function : PASS/FAIL evaluation using preset upper/lower limit
 Comparator result output : Internal buzzer (PASS/FAIL, ON/OFF switchable) and I/O output
 Zero-adjust function : For measurement probe impedance cancellation
 Zero-adjust range : 0 - 0.100Ω
 Memory function : Max. 20 settings (with save/load)

General Specifications

Display : Fluorescent tube (digital display)
 Ambient conditions for use : 0 to +40°C (32 to 104°F), 90% RH or less (no condensation)
 Ambient conditions for storage : -10 to +50°C (14 to 122°F), 95% RH or less (no condensation)
 Ambient conditions for assured accuracy : 23°C ± 5°C (73°F ± 9°F) 90% RH or less (no condensation)
 Assured accuracy : After 30 minute warm up period
 Suitable environments : Indoors, altitude up to 2000 m
 Power supply : 100 - 120 V/200 - 240 V AC (switching), 50 - 60 Hz
 Withstand voltage : 1.35 kV AC, 20 mA, 1 min., between power supply and chassis
 Maximum rated power : 350 VA (with optional equipment)
 Fuse : 250V T3. 15AL
 Compatible standards : 1. EMC : EN61326:1997+A1:1998 CLASS A
 EN61000-3-2:1995+A1:1998+A2:1998, EN61000-3-3:1995
 2. Safety : EN61010-1:1993+A1:1995, Contamination 2 Measurement category II (expected overvoltage category 2500 V)

Interfaces : 1. External I/O * Output signals: PASS /UP, FAIL /LOW, FAIL /TEST /READY, open collector, Input signals: START /STOP /External I/O, ENABLE ... 5 - 24 V DC
 2. Front EXT connector *, External START/STOP input ... contact signal
 * When external start/stop connector is used, START key is inactive
 3. RS-232C or GP-IB (option; one only), Remote control, measurement data output (When RMT indicator is on, operation keys are locked; only LOCAL, STOP, and external keys work)
 Dimensions and Mass : 320 (12.60") W × 90 (3.54") H × 263 (10.35") D mm, (Without protruding parts), Approx. 7 kg / 246.9 oz (without options)
 Standard accessories : Power cord, spare fuse (integrated in inlet), shorting bar × 2 (current output - voltage sensing terminal)



Model : AC GROUNDING HITESTER 3157

Model No. (Order Code) (Note)
3157-01 (100-120 / 200-240 VAC switching)

Note: This instrument is not capable of performing measurement by itself. Please purchase two Current probe 9296 units or one Current probe 9296 and one Current apply probe 9297, depending on your measurement application.:

*When using the Printer 9442, also purchase the RS-232C Interface 9593-02

| | | | |
|---|--|--|---|
| | | | |
| PRINTER 9442 For printing numerical values 112 mm (4.41 in) paper width | AC ADAPTER 9443-02 For the Printer 9442, EU type | CONNECTION CABLE 9446 For the Printer 9442, 25 pin - 9 pin, 1.5 m (4.92 ft) length | RECORDING PAPER 1196 For the Printer 9442, 112 mm (4.41 in) × 25 m (82.03 ft), 10 rolls/set |

*The 3157-01's handshake function cannot be used with the RS-232C Cable 9638

| | | | | | |
|---|---|---|--|--|--|
| | | | | | |
| REMOTE CONTROL BOX (SINGLE) 9613 For Start/Stop control, 1.5m (4.92 ft) cord length | REMOTE CONTROL BOX (DUAL) 9614 For Start/Stop control, 1.5m (4.92 ft) cord length | CURRENT PROBE 9296 Alligator clip, 1.45m (4.76 ft) length | CURRENT APPLY PROBE 9297 With switch, 1.48m (4.86 ft) length | GP-IB CONNECTOR CABLE 9151-02 2 m (6.56 ft) length | GP-IB INTERFACE 9518-02 For the 3157-01, built in type |

Other

SAFETY TEST DATA MANAGEMENT SOFTWARE 9267
For PC control application software

Note: Company names and Product names appearing in this catalog are trademarks or registered trademarks of various companies.



HIOKI E. E. CORPORATION

HEADQUARTERS

81 Koizumi, Ueda, Nagano 386-1192 Japan
 TEL +81-268-28-0562 FAX +81-268-28-0568
 http://www.hioki.com / E-mail: os-com@hioki.co.jp

HIOKI USA CORPORATION

TEL +1-609-409-9109 FAX +1-609-409-9108
 http://www.hiokiusa.com / E-mail: hioki@hiokiusa.com

HIOKI (Shanghai) SALES & TRADING CO., LTD.
 TEL +86-21-6391-0090/0092 FAX +86-21-6391-0360
 http://www.hioki.cn / E-mail: info@hioki.com.cn

HIOKI SINGAPORE PTE. LTD.
 TEL +65-6634-7677 FAX +65-6634-7477
 E-mail: info-sg@hioki.com.sg

HIOKI KOREA CO., LTD.
 TEL +82-2-2183-8847 FAX +82-2-2183-3360
 E-mail: info-kr@hioki.co.jp

HIOKI EUROPE GmbH
 TEL +49-6173-3234063 FAX +49-6173-3234064
 E-mail: hioki@hioki.eu

DISTRIBUTED BY